










Quick Start Guide

Before you start:

- Make sure the wall/ceiling is strong enough to withstand three times the weight of the camera and the mount.
- For wooden wall/ceiling, wall plugs are not necessary. The product images listed below are for reference only. For more information, visit our website (<http://www.hikvision.com/>).



Note:

For cameras with 4-in-1 video output, press and hold the switch button for 5 seconds to switch output signal. Four kinds of video outputs are available: TVI, AHD, CVI, and CVBS.
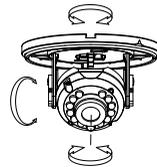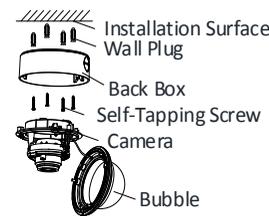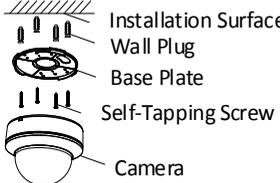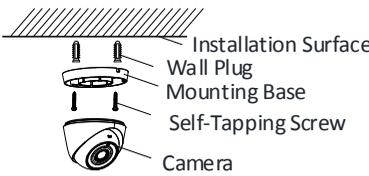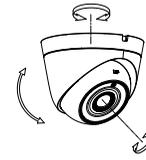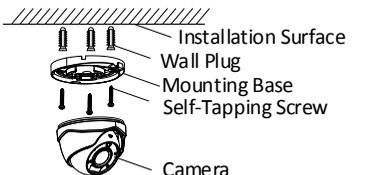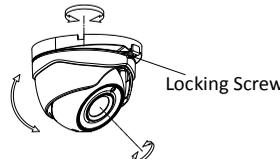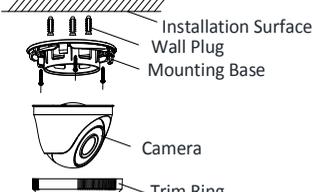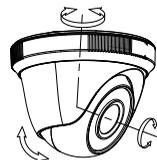
<p>Type I Dome Camera</p>	 <p>Installation Surface Wall Plug Camera Self-Tapping Screw Black Liner Bubble</p>	
<p>Type II Dome Camera</p>	 <p>Installation Surface Wall Plug Back Box Self-Tapping Screw Camera Bubble</p>	
<p>Type III Dome Camera</p>	 <p>Installation Surface Wall Plug Base Plate Self-Tapping Screw Camera</p>	
<p>Type I Turret Camera</p>	 <p>Installation Surface Wall Plug Mounting Base Self-Tapping Screw Camera</p>	
<p>Type II Turret Camera</p>	 <p>Installation Surface Wall Plug Mounting Base Self-Tapping Screw Camera</p>	 <p>Locking Screw</p>
<p>Type III Turret Camera</p>	 <p>Installation Surface Wall Plug Mounting Base Camera Trim Ring</p>	


Type IV

Turret Camera

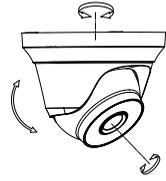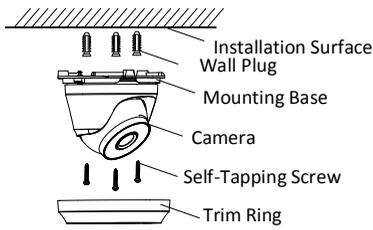



Type V

Turret Camera

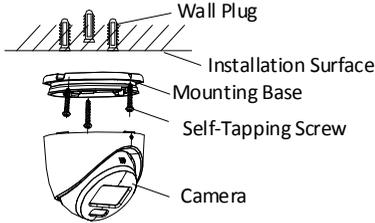




Type VI

Turret Camera

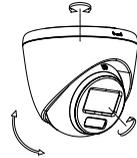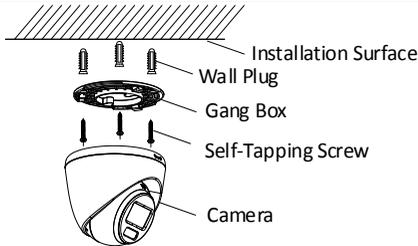



Type I

 Bullet Camera

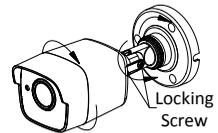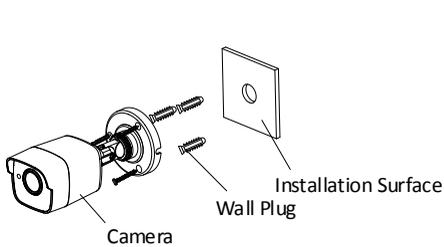

Type II

 Bullet Camera

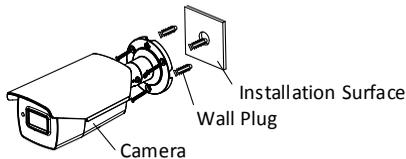

Type III

Bullet Camera

